

# Instruction Manual

Item No.: K2CSC

(For child from birth to 36months)



AKARANA  BABY®

# **Notice:**

- (1) Read all instruction before assembly and use of this product. Keep the instructions for future reference. Adult assembly is required.
- (2) Before assembly or using, inspection this product for damaged hardware, loose joints, missing parts or sharp edges.
- (3) Do not use if any parts are missing or broken. Contact customer service for replacement parts and instructions if needed. Never substitutes the parts.
- (4) Please remove all parts from the package and identify them before assembly
- (5) Make sure the locking is under working before use the stroller


# **Warning:**

- (1) Never leave your child unattended
- (2) Always use restraint system to keep child from standing up or falling out of the stroller
- (3) This product is not suitable for running or skating
- (4) Ensure that all locking devices are engaged before use
- (5) To avoid injury ensure that your child is kept away when unfolding and folding this product
- (6) Do not adjust seat position when child is in the seat
- (7) Do not let your child play with this product
- (8) Check that the seat unit or car seat or pram body attachment devices are correctly engaged before use


- (9) Do not exceed the maximum loading weight limit of 2kgs in shopping basket
- (10) Do not exceed the maximum loading weight limit of 15kgs in seat unit
- (11) Be careful for your finger when folding or unfolding.
- (12) Be careful for your finger or any part of your body when adjusting the backrest, safety belt and front bumper.
- (13) Always set the wheel brakes when stroller is not moving, especially on an incline
- (14) Never use this stroller on stairways or escalators
- (15) Do not place stroller near dangerous places like stove or pool
- (16) Only one child is allowed occupying the stroller
- (17) To avoid danger of suffocation, keep the plastic bag away from child

## **Installation and operation.**


1. Take out the stroller from carton. Check all accessories:  
(1)One piece of front bumper. (2)One stroller. (Fig.1)

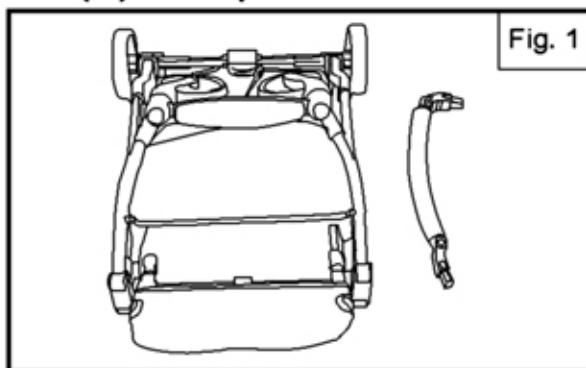


2. Unfolding: Press the second lock on hold with your thumb, press the button to the end, and then lift the handle to unfold the stroller until you hear a “click” from folding system. Please make sure the second lock and button are both restoration before using. (Fig.2)

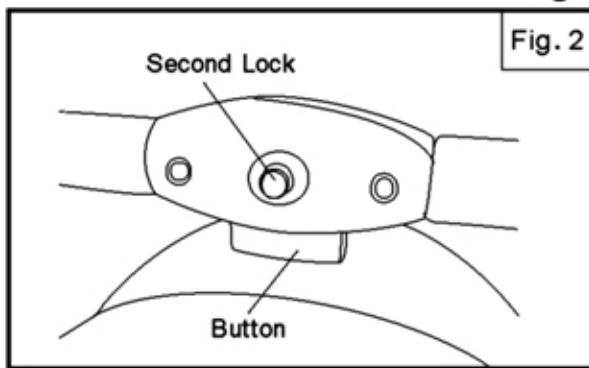


3. Safety lock: After unfolding, please make sure the safety lock is engaged.(Fig.3)

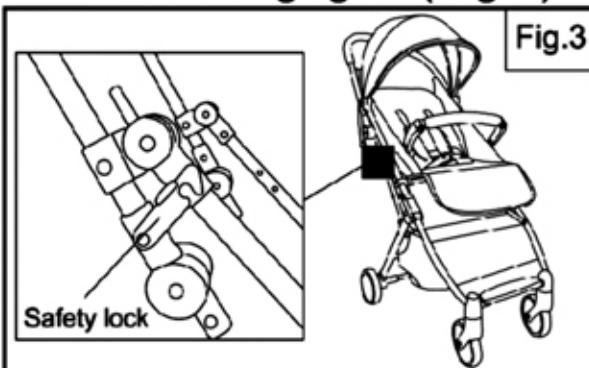


4. Adjustable Footrest: There is a button under footrest on left and right side, press both buttons at the same time to adjust footrest. (Fig.4)

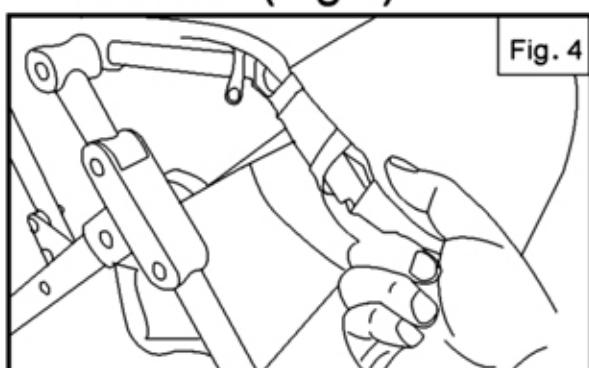


5. Detachable front bumper: When removing the bumper, please press the button as picture showed, and then pull out the bumper. Otherwise insert the bumper until it “clicks” into the locked position. (Fig.5)

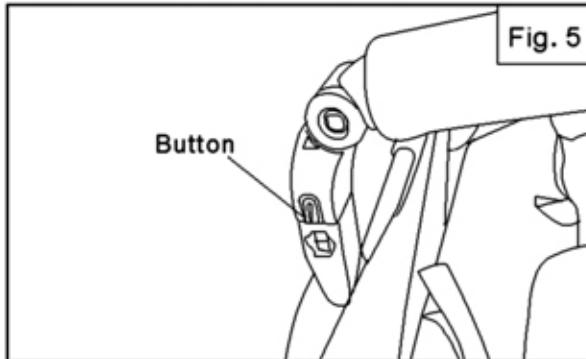

6. Press the brake pedal down until it “clicks” into the locked position. Lift the pedal to release the brake. (Fig.6)

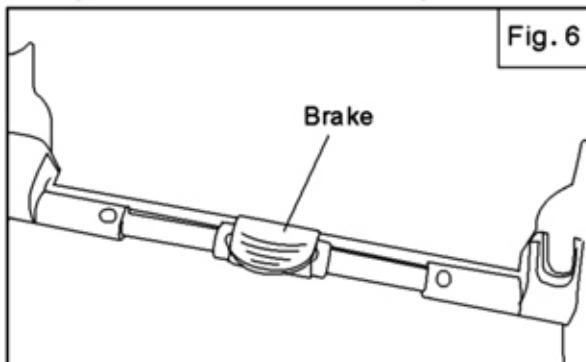


7. Backrest adjustment system: Holding the belt by one hand, adjust the button up and down by the other hand to adjust the reclining angle. (Fig.7)


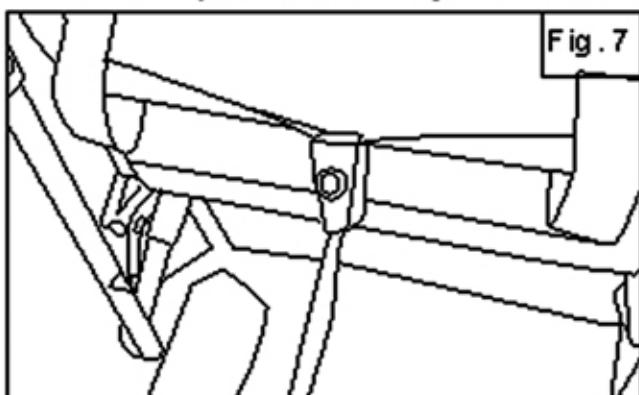


8. Place your child in the stroller. Make sure the crotch belt is placed between your child's legs. Fasten both waist belts to


the buckle until you hear a “click”. (Fig.8)

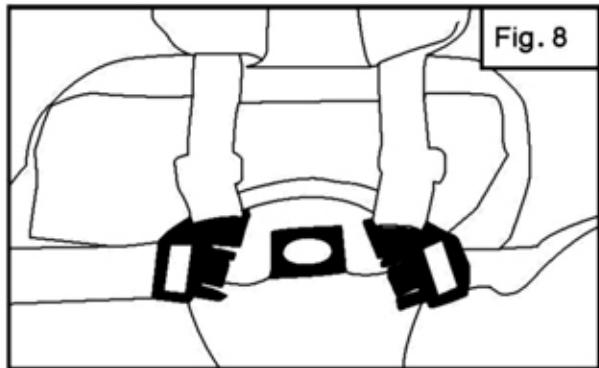

9. **Folding:** Release the safety lock first(Fig.3), Press the second lock on hold with your thumb, press the button to the end, and then push down the handle to fold the stroller until you hear a “click” from folding system. Please make sure the second lock and button are both restoration. The stroller can be standing after folding. (Fig.9&10)

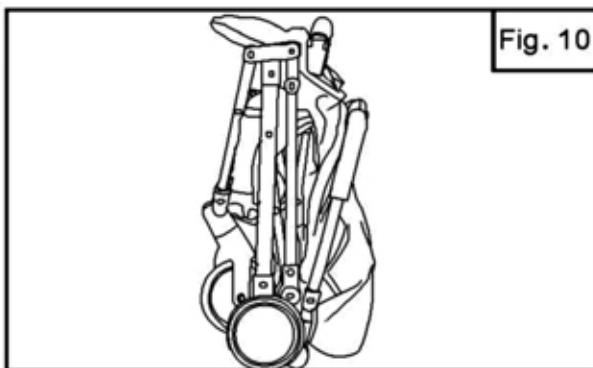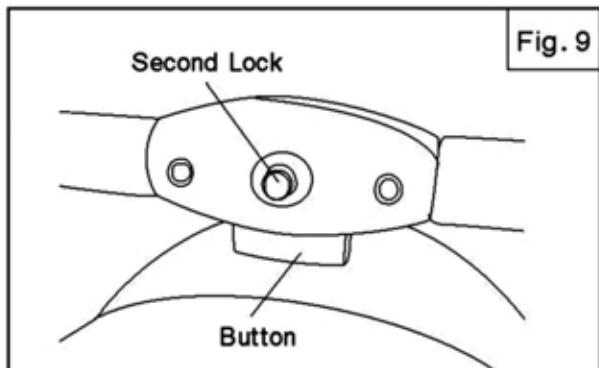

10. There is a draw-bar under the seat, it's convenient for moving the stroller after folding.

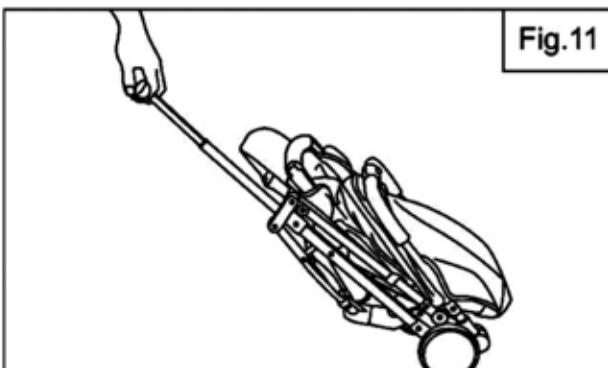

11. Car seat assembly:(1). Remove the front bumper. (2). Put car seat on the seat, press the lock on the tube as shown in below picture(Fig.12). Make sure two sides of lock are both engaged before use.

